



	PART	DESCRIPTION	QTY USED	NOTE
1	H30 -1	Head Assembly		
2	H30 -2	Quick Shoe Plate	1	
3	H30 -3	Camera Screw Lever (1/4-20 UNC)	1	
4	H30 -4	Camera Screw (1/4-20 UNC)	1	
5	H30 -5	Locking Knob, Tilt	1	
6	H30 -6	Locking Knob, Pan	1	
7	H30 -7	Locking Knob, Shoe Plate	1	
8	H30 -8	Level	1	