



	PART	DESCRIPTION	Q`TY USED	NOTE
1	H35-1	Head Assembly		
2	H35-2	Quick Shoe Plate	1	
3	H35-3	Camera Screw Lever (1/4-20 UNC)	1	
4	H35-4	Camera Screw (1/4-20 UNC)	1	
5	H35-5	Locking Knob, Tilt	1	
6	H35-6	Locking Knob, Pan	1	
7	H35-7	Fixing Handle, B-Leveler	1	
8	H35-8	Locking Knob, Shoe Plate	1	
9	H35-9	Level	1	